



NURIT TERMINAL EASY USER GUIDE

CANADIAN APPLICATION CTR4_6X

Cards are swiped with magnetic stripe **down** and to the **right**. They can be swiped either **top to bottom** or **bottom to top**.

CREDIT CARD PURCHASE (No Tip)

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Swipe card or manually enter credit card number. ENTER
2.	Expiration date (manual)	Enter card expiration date (MMYY). ENTER
3.	Amount	Enter the amount of the sale. ENTER
4.	Approve Amount	Press ENTER to approve the transaction amount or MENU/ESC to cancel.
6.	Second Receipt	Press any key to print second receipt.

CREDIT CARD PURCHASE (Tip at Time of Transaction)

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Swipe card or manually enter credit card number. ENTER
2.	Expiration date (manual)	Enter card expiration date (MMYY). ENTER
3.	Server ID (optional)	Enter Server ID ENTER
4.	Amount	Enter the amount of the sale. ENTER
5.	Tip Amount	Enter tip amount. ENTER
6.	Approve Amount	Press ENTER to approve the transaction amount or MENU/ESC to cancel.
7.	Second Receipt	Press any key to print second receipt.

CREDIT CARD PURCHASE (Tip to be Added Later)

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press VERIFY
2.	Verify Prompt	Swipe card or manually enter credit card number. ENTER
3.	Expiration date (manual)	Enter card expiration date (MMYY). ENTER
4.	Server ID (optional)	Enter Server ID ENTER
5.	Amount	Enter the amount of the sale. ENTER
6.	Approve Amount	Press ENTER to approve the transaction amount or MENU/ESC to cancel.
7.	Second Receipt	Press any key to print second receipt.

DEBIT CARD PURCHASE (No Tip)

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press PAYMT MODE until terminal displays debit prompt.
2.	Debit Prompt	Swipe card.
3.	Amount	Enter the amount of the sale. ENTER
4.	Cash Back	Enter cash back amount then ENTER or ENTER to bypass.
5.	Approve Amount	On the PIN Pad, press OK to approve the purchase amount.
6.	Approve Fee	On the PIN Pad, press OK to approve the fee amount.
7.	Select Account Type	On the PIN Pad, press SAV EP to withdraw from savings or CHQ to withdraw from checking.
8.	Enter PIN	On the PIN Pad, have the customer enter their PIN code. OK
9.	Second Receipt	Press any key to print the second receipt. Paper type must be set to custom for second debit receipt.

DEBIT CARD PURCHASE (Tip at Time of Transaction)

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press PAYMT MODE until terminal displays debit prompt.
2.	Debit Prompt	Swipe card.
3.	Amount	Enter the amount of the sale. ENTER
4.	Cash Back	Enter cash back amount then ENTER or ENTER to bypass.
5.	Approve Amount	On the PIN Pad, press OK to approve the purchase amount.
6.	Tip Amount	Enter the tip amount. ENTER
7.	Approve Tip Amount	On the PIN Pad, press OK to approve tip amount or CORR to correct.
8.	Approve Fee	On the PIN Pad, press OK to approve the fee amount.
9.	Select Account Type	On the PIN Pad, press SAV EP to withdraw from savings or CHQ to withdraw from checking.
10.	Enter PIN	On the PIN Pad, have the customer enter their PIN code. OK
11.	Second Receipt	Press any key to print the second receipt. Paper type must be set to custom for second debit receipt.

CASH PURCHASE

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press PAYMT MODE until terminal displays CASH prompt.
2.	Cash Prompt / Amount	Enter the amount of the sale. ENTER
3.	Approve Amount	Press ENTER to accept the transaction amount.
4.	Second Receipt	Press any key to print the second receipt. Paper type must be set to custom for second cash receipt.

VOID

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press VOID until terminal displays VOID/SALE, VOID/FRCD or VOID/RTRN prompt.
2.	Void	Swipe card or manually enter credit card number. ENTER
3.	Expiration date (manual)	Enter card expiration date (MMYY). ENTER
4.	Trace number	Enter the trace number from the original transaction receipt. ENTER
5.	Approve Transaction	Press ENTER to approve the transaction to be voided.
6.	Second Receipt	Press any key to print the second receipt.

NOTE: Transactions that have batched cannot be voided, they must be returned. Debit transactions cannot be voided.

RETURN – CREDIT CARD

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press RETURN to display the RETURN prompt.
2.	Return	Swipe card or manually enter credit card number. ENTER
3.	Expiration date (manual)	Enter card expiration date (MMYY). ENTER
4.	Amount	Enter amount. ENTER
5.	Approve Amount	Press ENTER to approve the transaction amount.
6.	Second Receipt	Press any key to print the second receipt.

VERIFY

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press VERIFY to display VERIFY prompt.
2.	Pre-Authorization	Swipe card or manually enter credit card number. ENTER
3.	Expiration date (manual)	Enter card expiration date (MMYY). ENTER
4.	Amount	Enter amount. ENTER
5.	Approve Amount	Press ENTER to approve the transaction amount.

FORCED

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press FORCED until terminal displays forced prompt.
2.	Forced	Swipe card or manually enter credit card number. ENTER
3.	Expiration date (manual)	Enter card expiration date (MMYY). ENTER
4.	Amount	Enter amount. ENTER
5.	Authorization Number	Enter the Auth No received via voice authorization or from the Verify receipt. ENTER
6.	Approve Amount	Press ENTER to approve the transaction amount.
7.	Second receipt	Press any key to print the second receipt.

PRINT LAST RECEIPT

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press the ALPHA key.
2.	Receipt Menu	Press 1 to print the last receipt.
3.	Not Available	The last receipt is not available to print. A cancelled or declined transaction can void this function.

PRINT ANY RECEIPT

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press the ALPHA key.
2.	Receipt Menu	Press 2 to print any receipt.
3.	Choose EDC	Press the number that corresponds with the EDC type of original receipt.
4.	Transaction?	Enter the transaction number. ENTER

ADD TIPS

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press the FORCED key.
2.	Forced Prompt	Press the REVIEW key.
3.	Uncompleted Pre-Auth	Press 1 to scroll through the uncompleted pre-authorized transactions.
4.	1 st Untipped trans info.	Press RETURN ▲ and FORCED ▼ to scroll up and down through the transactions.
5.	Transaction Needing Tip	To add a tip, press ENTER . To bypass and display next transaction, press FORCED .
6.	Server ID	Enter the original server ID. ENTER
7.	Tip Entry	Enter tip amount. ENTER

CLOSE CURRENT BATCH

STEP	TERMINAL PROMPT	ACTION
1.	Idle Prompt	Press the BATCH key on Model 2085
1.a	Idle Prompt	Press the FUNC key then press 6 to start batch process on Models 30XX & 8320.
2.	Choose Host	Press 1 to batch all EDC types or choose the EDC type to be batched.
3.	Uncompleted Pre-Auth Transactions	You may be prompted that the terminal has uncompleted pre-authorized transactions. Press ENTER to continue the batch process or MENU/ESC to cancel.
4.	Password	Depending upon the host and terminal setup, the terminal will start the batch process or offer a choice of EDC types to batch.